



1. Prepare the fan parts and motor for assembly.



2. Install B35 foot cum flange motor on fan bracket with the screws provided.



3. Install fan casing on the motor with screws provided.




4. Install the PP impeller on the motor.



5. Tighten the PP impeller with screw provided.



6. Install fan inlet on the casing.

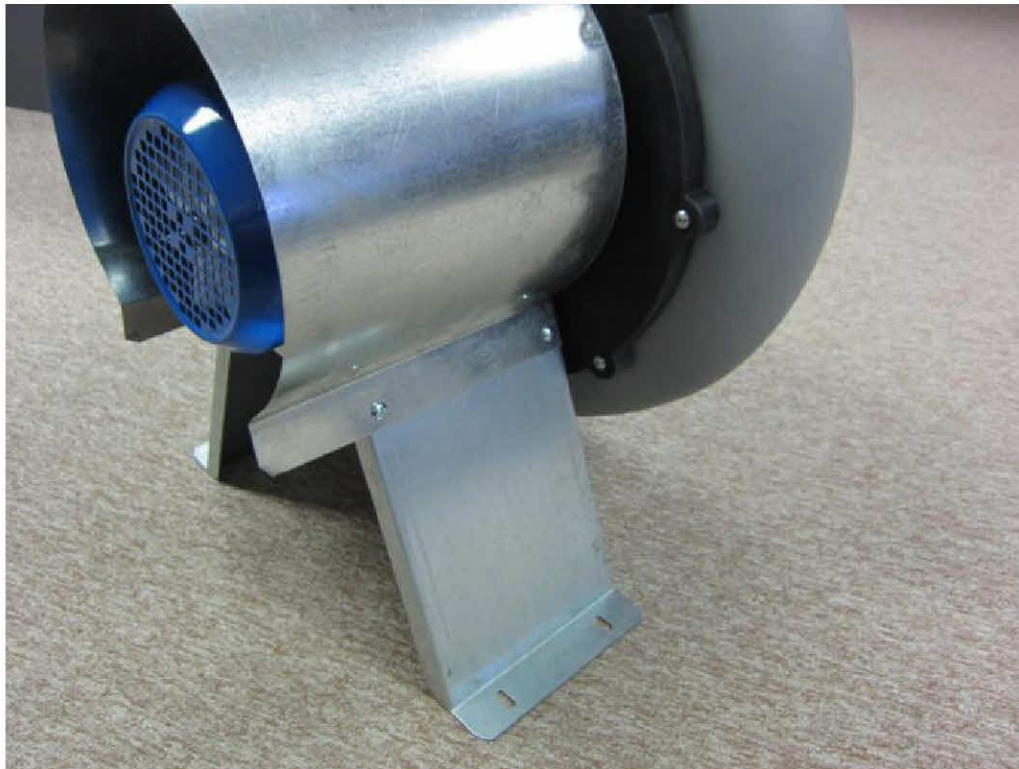

7. Install motor cowl on fan bracket with screws provided.



8. Fan assembly completed.